


# FOTEK

PCB type RoHS

## 多點電流偵測通訊板

Current detector

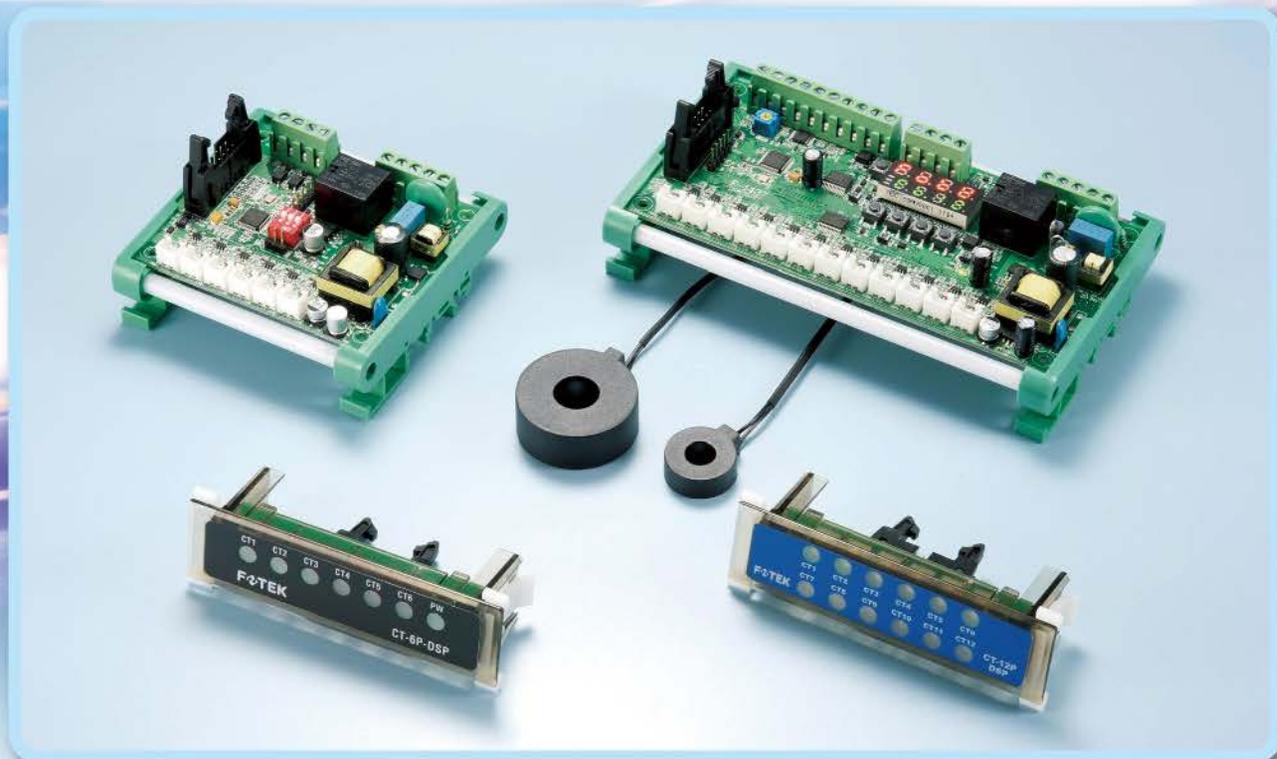

### GT-6P series Six ports current detector

#### Specification / 規格

Model	型號	CT-6P	
Power supply	電源	90~265VAC 50/60Hz	
Alarm output	警報輸出	Relay 5A/250VAC	
Current consumption	耗電流	3VA max	
Gate-in	同步輸入	2 ports (12VDC)	
CT input ports	CT 輸入點	6 ports	
Detectable current min.	最小偵測電流	0.3A	
Function switch	功能切換開關	Dip sw 3P	
CT input	CT 輸入	20mA max.	
Attachment option	選配	CT-6P-DSP	

#### Dimension / 外形尺寸

CT-6P-□□	CT-6P-DSP	CT-09-PE

# CT-12P series 12 ports current detector

## Specification / 規格

Type	型式	Standard 基本型	Communication 斷線檢出型	Current transmitter 電流傳送型
Model	型號	CT-12P	CT-12P-RS	CT-12PE-RS
Communication	通訊	non	RS-485	RS-485
Current transmitter	電流傳送	non	non	cu.01 ~ cu.12
Detection function	偵測功能	斷線	斷線+輸出短路	斷線+輸出短路+電流偵測
Power supply	電源	90~265VAC 50/60Hz		
Current consumption	耗電流	5VA max		
Display	顯示器	4 + 4 digits		
CT input	CT 輸入	0 ~ 20mA (VAC)		
Alarm output	警報輸出	Relay 10A/250VAC		
Gate-in	同步輸入	4 ports (ON/OFF or 4~20mA or 1~5V)		
CT input ports	CT 輸入點	12 ports		
Detectable current min.	最小偵測電流	0.1A		
Reset key	復歸按鍵	Taco switch		
Attachment option	選配	CT-12P-DSP		


## Detection setting of CT / CT偵測設定 [CT-12PK/CT-12P/CT-12P-RS/CT-12PE-RS]

Function		Range	Description
	F o t k Ct.12  C t.01 on  C t.02 on  C t.03~11 on  C t.12 oFF	on or oFF          on or oFF          on or oFF          on or oFF	1> 「Ct.01=on」: Turn ON CT-01 detecting / 開啟偵測 Ct-01 功能 2> 「Ct.01=oFF」: Turn OFF CT-01 detecting / 關閉偵測 Ct-01 功能  1> 「Ct.02=on」: Turn ON CT-02 detecting / 開啟偵測 Ct-02 功能 2> 「Ct.02=oFF」: Turn OFF CT-02 detecting / 關閉偵測 Ct-02 功能  1> 「Ct.03=on」: Turn ON CT-03 detecting / 開啟偵測 Ct-03 功能 2> 「Ct.03=oFF」: Turn OFF CT-03 detecting / 關閉偵測 Ct-03 功能  1> 「Ct.12=on」: Turn ON CT-12 detecting / 開啟偵測 Ct-12 功能 2> 「Ct.12=oFF」: Turn OFF CT-12 detecting / 關閉偵測 Ct-12 功能

## Current value of CT / 電流顯示值 [CT-12PE-RS]

Function	Display	Range
	F o t k Ct.12  Cu.01 nn.n  Cu.02 nn.n  Cu.03 nn.n  Cu.12 nn.n	0.0~99.9          0.0~99.9          0.0~99.9          0.0~99.9

## Outline外形

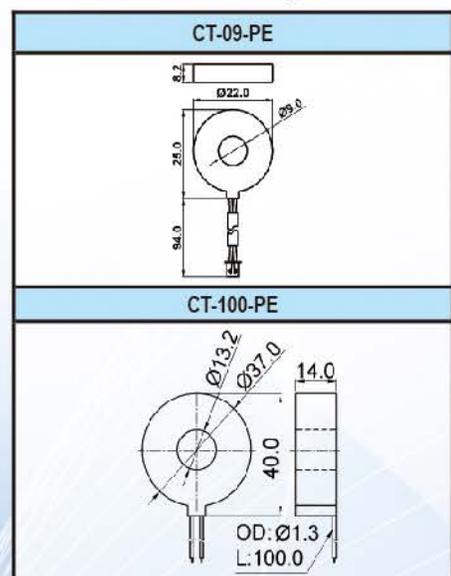

# Setting of parameter / 參數設定【CT-12P / CT-12P-RS】

Function	Range	Description
<b>Control status</b> 控制狀態 Press SET & F key 3 sec <b>Lock setting</b> 鎖定設定 Press SET <b>Control method of load selecting</b> 負載控制方式選擇 Press SET <b>Reset time of CV display</b> 偵測模式選擇 Press SET <b>Detection mode selecting</b> 偵測模式選擇 Press SET <b>Alarm Delay time setting</b> 警報動作延遲時間設定 Press SET <b>Reset method selection</b> 復歸方式選擇 Press SET <b>Current display adjusting</b> 電流顯示值修正 Press SET <b>Low level setting of IN-1</b> IN-1 低電流設定 Press SET <b>High level setting of IN-1</b> IN-1 高電流設定 Press SET ... <b>Low level setting of IN-4</b> IN-4 低電流設定 Press SET <b>High level setting of IN-4</b> IN-4 高電流設定 Press SET	F o k Ct.12 L c k 10 n o d 0 c t 2 F u n 0 o n d 6 r s t 0 C A d 0.0 H b L.1 0.1 H b H.1 30.0 H b L.2 0.1 H b L.4 0.1 H b H.4 30.0	1> 「Lck=10」: Unlock 2> 「Lck≠10」: All lock 0 or 1 1> 「nod=0」: ON/OFF control 2> 「nod=1」: Phase control 0 ~ 99 s 1> 「ct=2」: Current value display reset time= 2*2 seconds 2> For ON/OFF control only 0 ~ 2 1. 「Fun=0」: Heater break detection only / 斷線偵測功能 2. 「Fun=1」: Heater break & Short circuit detection / 斷線+輸出短路偵測 3. 「Fun=2」: Heater break & Short circuit & Over current detection 斷線+輸出短路+過電流偵測 0~99s 1> 「ond=6」: Power on delay 6 seconds to detect alarm status 2> 「ond=6」: Alarm status delay 6 seconds to output 0 or 1 1> 「rst=0」: Power ON reset or External reset 2> 「rst=1」: Auto reset or External reset -9.99 ~ +9.99 1> CV = CV+ 「CA d」 ※ 「HbL」及「HbH」 → 「HbH.1」/ 「HbL.1」: Limit of current for CT-01 / CT-02 / CT-03 → 「HbH.2」/ 「HbL.2」: Limit of current for CT-04 / CT-05 / CT-06 → 「HbH.3」/ 「HbL.3」: Limit of current for CT-07 / CT-08 / CT-09 → 「HbH.4」/ 「HbL.4」: Limit of current for CT-10 / CT-11 / CT-12 1. 「CV-01~CV-03」 < 「HbL.1」 → Delay 「ond」 time to turn ON Relay 「CV-01~CV-03」 > 「HbH.1」 → Delay 「ond」 time to turn ON Relay 2. 「CV-04~CV-06」 < 「HbL.2」 → Delay 「ond」 time to turn ON Relay 「CV-04~CV-06」 > 「HbH.2」 → Delay 「ond」 time to turn ON Relay 3. 「CV-07~CV-09」 < 「HbL.3」 → Delay 「ond」 time to turn ON Relay 「CV-07~CV-09」 > 「HbH.3」 → Delay 「ond」 time to turn ON Relay 4. 「CV-10~CV-12」 < 「HbL.4」 → Delay 「ond」 time to turn ON Relay 「CV-10~CV-12」 > 「HbH.4」 → Delay 「ond」 time to turn ON Relay

# Dimension / 外形尺寸

T-12P	CT-12P-DSP

## Setting of parameter / 參數設定 【CT-12PE-RS】

Function	Parameter	Range	Description
Control status 控制狀態	F o t k Ct.12		
Press SET & F key ↓ 3 sec			
Lock setting 鎖定設定	L c k 10		1> 「Lck=10」: Unlock 2> 「Lck≠10」: All lock
Press SET			
Control method of load selecting 負載控制方式選擇	n o d 0	0 or 1	1> 「nod=0」: ON/OFF control 2> 「nod=1」: Phase control
Press SET			
Reset time of CV display 偵測模式選擇	c t 15	0 ~ 99 s	1> 「ct=15」: Current value display reset time= 15*2 seconds 2> For ON/OFF control only
Press SET			
Detection mode selecting 偵測模式選擇	F u n 0	0 ~ 2	1. 「Fun=0」: Heater break detection only / 斷線偵測功能 2. 「Fun=1」: Heater break & Short circuit detection / 斷線+輸出短路偵測 3. 「Fun=2」: Heater break & Short circuit & Over current detection 斷線+輸出短路+過電流偵測
Press SET			
Alarm Delay time setting 警報動作延遲時間設定	o n d 6	0~99s	1> 「ond=6」: Power on delay 6 seconds to detect alarm status 2> 「ond=6」: Alarm status delay 6 seconds to output
Press SET			
Reset method selection 復歸方式選擇	r s t 0	0 or 1	1> 「rst=0」: Power ON reset or External reset 2> 「rst=1」: Auto reset or External reset
Press SET			
CT-1 rated current setting CT-1 額定電流設定	C t h . 1 30.0	0.0~999.9	1> Rated current of CT-1
Press SET			
CT-2 rated current setting CT-2 額定電流設定	C t h . 2 30.0	0.0~999.9	1> Rated current of CT-2
Press SET			
CT-3~CT-12 rated current setting CT-3~CT-12 額定電流設定	C t h . n 30.0	0.0~999.9	1> Rated current of CT-3~ CT-12
Press SET			

## Setting of Communication / 通訊參數設定 【CT-12P-RS/ CT-12PE-RS】

Function	Parameter	Range	Description
Control status 控制狀態	F o t k Ct.12	-200 ~ 9999	
Press SET & V key ↓ 3 sec			
Controller NO. 控制器編號設定	I d 1	1 ~ 255	1> Range : 1~255
Press SET key ↓			
Communication protocol 通訊協定選擇	r S 0	0 ~ 1	1> 「rs=0」: Modbus-RTU 2> 「rs=1」: Modbus-ASCII
Press SET key ↓			
Communication speed 通訊速率選擇	b P S 384	96 / 192 384 / 152	1> 「bPS=96」: 9600 bps 2> 「bPS=192」: 19200 bps 3> 「bPS=384」: 38400 bps 4> 「bPS=152」: 115200 bps
Press SET key ↓			
Data configuration 資料結構選擇	b i t 8N1	8N1 / 8E1 8O1 / 7O1	1> 「bit=8N1」: 8 bit non parity 2> 「bit=8O1」: 8 bit odd parity 3> 「bit=8E1」: 8 bit even parity 4> 「bit=8N2」: 8 bit non parity 5> 「bit=7O1」: 7 bit odd parity 6> 「bit=7E1」: 7 bit even parity
Press SET key			